Start Here

Epson Stylus® NX300 Series

1 Unpack

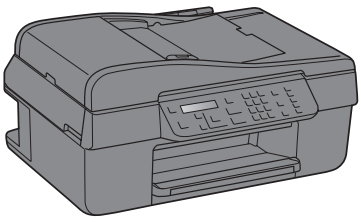



(Included for Canada only)





If anything is missing, contact Epson as described on the back in “Any questions?”.

Caution: Do not open the ink cartridge package until you are ready to install the ink. Cartridges are vacuum packed to maintain reliability.

Canada only: For French speakers, remove sticker(s) from the backing sheet and place over corresponding text on the control panel.

2 Turn on the NX300 Series

1 Connect the power cable.

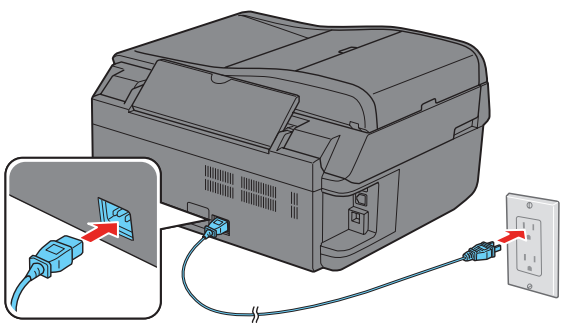

Caution: Do not connect to your computer yet.

2 Press the ⏻ **On** button.

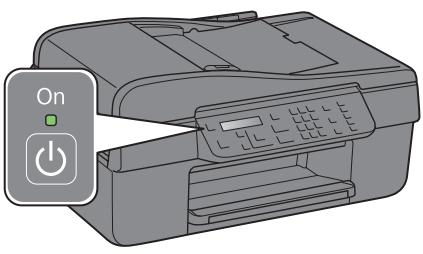

3 Choose your settings

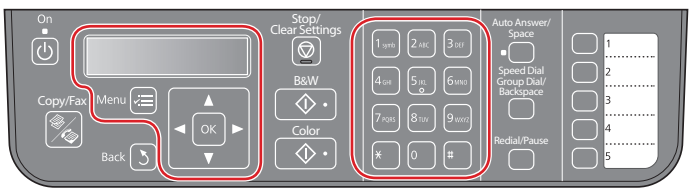

Select your language:

1. Press **Menu** to enter the setup mode.
2. Press ▲ or ▼ to select **Maintenance**, then press **OK**.
3. Press ▲ or ▼ to select your **Language**, then press **OK**.
4. Press ▲ or ▼ to select your laguage, then press **OK**.



411426100

EPSON®
EXCEED YOUR VISION

Select your country:

1. Press ▲ or ▼ to select **Country/Region**, then press **OK**.



2. Press ▲ or ▼ to select your **Region**, then press **OK**.

3. If you change the region, confirm your selection at next screen by pressing the **1** key (for yes) on the numeric keypad.



Enter the date and time:

1. Press ▲ or ▼ to select **Daylight Saving Time**, then press **OK**.
2. Press ▲ or ▼ to select **Summer**, if your region uses Daylight Saving Time and it's currently in effect. (DST is effective from spring to summer.) Otherwise select **Winter** to turn off the setting.



3. Press **OK**.
4. Press ▲ or ▼ to select **Date/Time**, then press **OK**.
5. Press ▲ or ▼ to select the type of date display, then press **OK**.



6. Use the numeric keypad to change the date, then press **OK**.
7. Press ▲ or ▼ to select a 12-hour or 24-hour display, then press **OK**.



8. Use the numeric keypad to set the time.



9. If you selected **12h**, Press ▲ or ▼ to select **AM** or **PM**.
10. Press **OK**.

When you're finished choosing your settings, press **Menu** to exit.

4 Install ink cartridges

Note: Don't load paper before installing the ink cartridges.

1. Open the scanner.

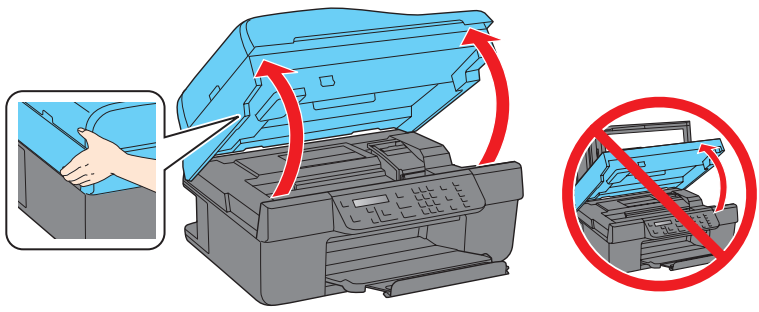

2. Open the cartridge cover.

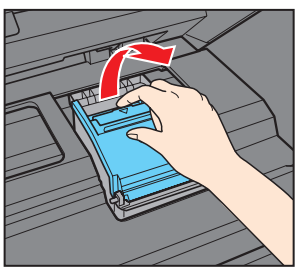

3. Shake the ink cartridges, then unpack them.

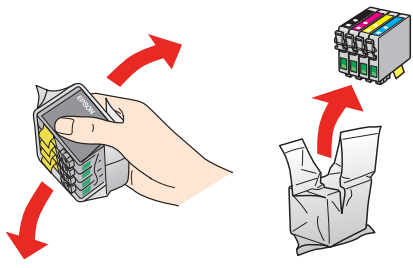

4. Remove only the yellow tape from each cartridge.

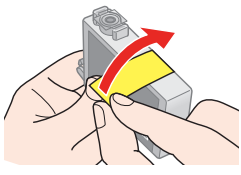

Caution: Don't remove any other seals from the cartridges.

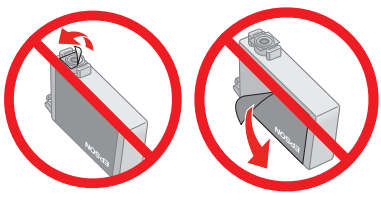

5 Insert the cartridges in the holder for each color.

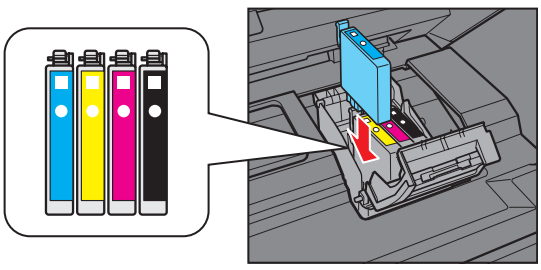

6 Press each cartridge down until it clicks.

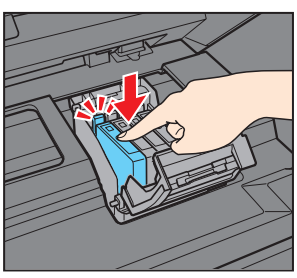

7 Close the ink cartridge cover and press it down until it clicks.

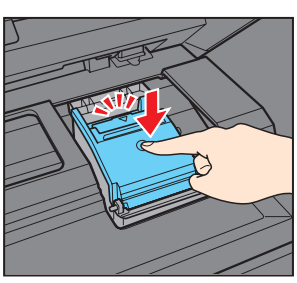

8 Close the scanner.

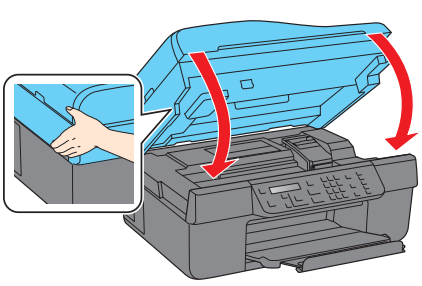

9 Press the **OK** button to charge the ink. Charging takes about 2 minutes.

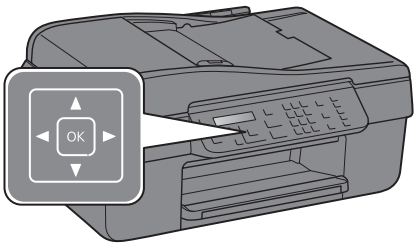

Caution: Don't turn off the NX300 Series while it is charging or you'll waste ink

5 Load paper

1 Open the paper support and pull up the extension.

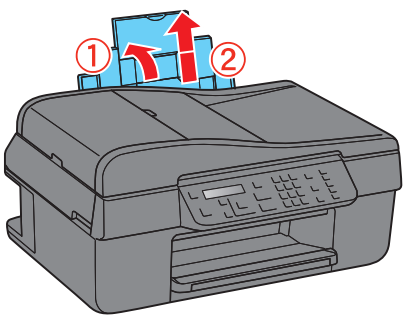

2 Open the output tray, pull out the extension, and raise the paper stopper.

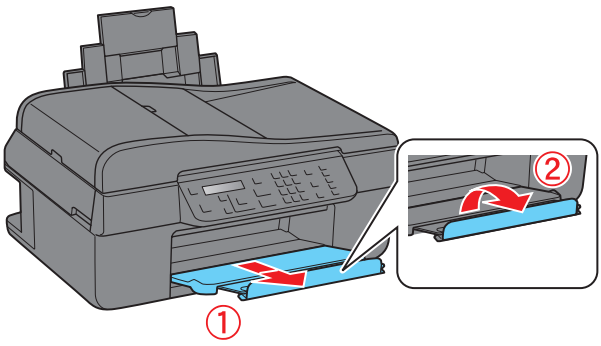

3 Slide the edge guide to the left while holding the feeder guard forward.

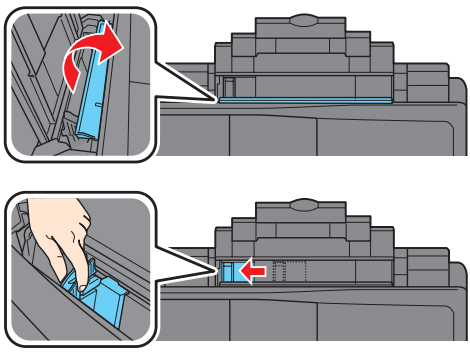

4 Load paper against the right edge guide and behind the tab, with the printable side face up.

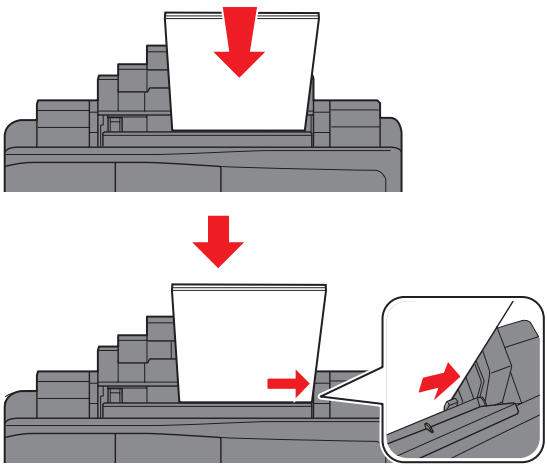

Note: Don't load the paper sideways; always load it short edge first.

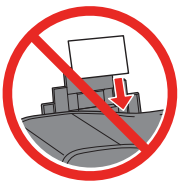

5 Slide the edge guide over.

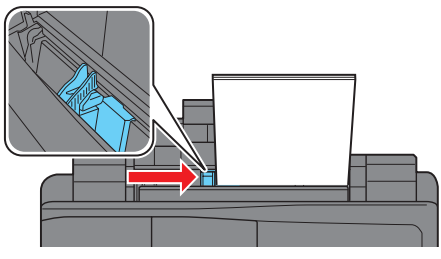

6 Connect the phone cord

To use the NX300 Series for faxing, connect the included phone cord from a telephone wall jack to the **LINE** port on the NX300 Series. To connect a telephone or answering machine, see the *Quick Guide* for instructions.

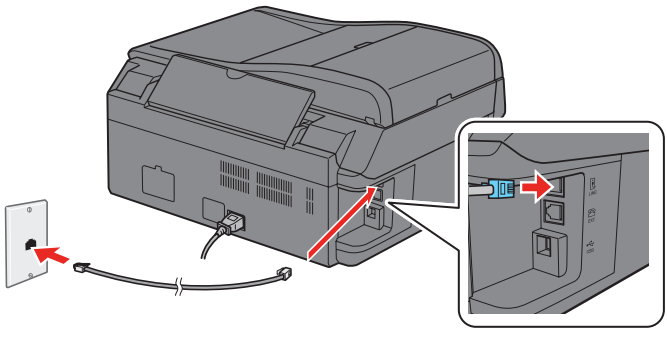

Note: If you're connecting to a DSL phone line, you must use a DSL filter or you won't be able to fax. Contact your DSL provider for the necessary filter.

7 Install software

Your software works with Windows® 2000, XP, XP Professional x64 Edition, Windows Vista®, and Mac OS® X 10.3.9, 10.4.x, or 10.5.x.

Windows

1 Make sure the NX300 Series is **NOT CONNECTED** to your computer.

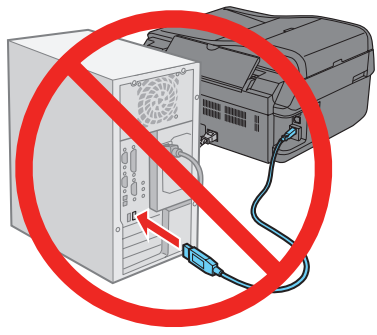

Note: If you see a Found New Hardware screen, click **Cancel** and disconnect the USB cable. You can't install your software that way.

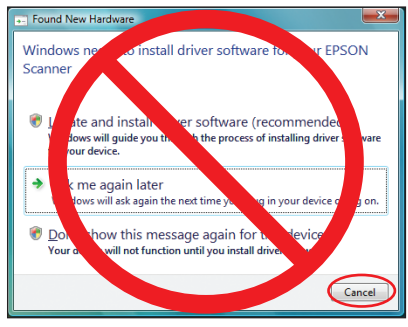

2 Insert the **NX300 Series** software CD.

With Windows Vista, if you see the AutoPlay window, click **Run Epsetup.exe**. When you see the User Account Control screen, click **Continue**.

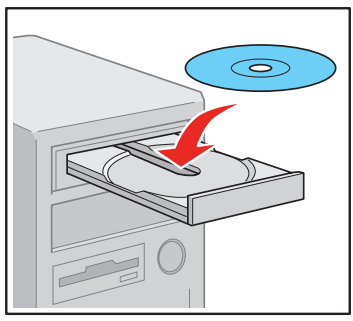

3 Click **Install** and follow the on-screen instructions.

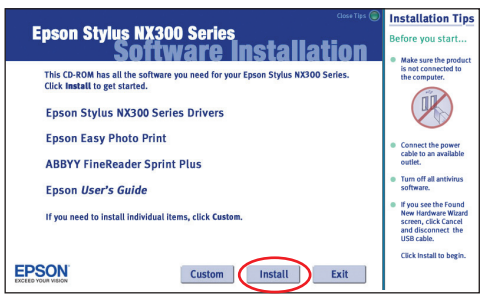
Epson Stylus NX300 Series
Software Installation
This CD-ROM has all the software you need for your Epson Stylus NX300 Series. Click Install to get started.
Epson Stylus NX300 Series Drivers
Epson Easy Photo Print
ABBYY FineReader Sprint Plus
Epson User's Guide
If you need to install individual items, click Custom.
Installation Tips
Before you start...
Make sure the product is not connected to the computer.
Connect the power cable to an available outlet.
Turn off all antivirus software.
If you see the Found New Hardware Wizard screen, click Cancel and disconnect the USB cable.
Click Install to begin.
EPSON
Custom
Install
Exit

4 When you see this screen, click the first option and then click **Next**, *unless* the NX300 Series is connected to your computer through an external print server.

If you're using an external print server, click the second option, click **Next**, then skip to step 6.

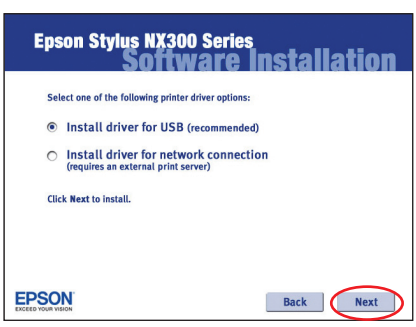

5 When prompted, connect the USB cable. Use any open USB port on your computer.

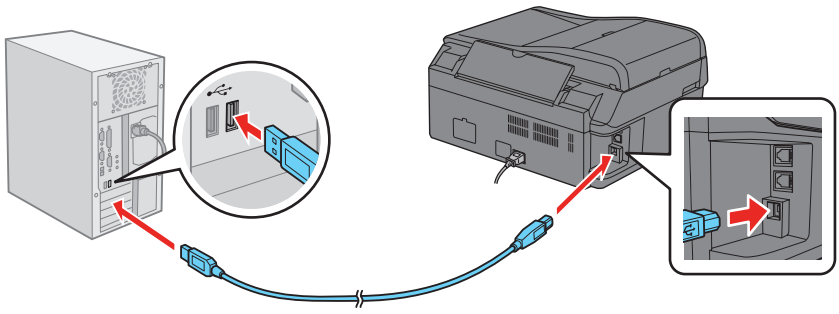

Note: If installation doesn't continue after a moment, make sure you securely connected and turned on the NX300 Series.

6 Follow the on-screen instructions to install the rest of the software and register your NX300 Series.

7 When you're done, eject the CD.

You're ready to print, copy, scan, and fax! See your *Quick Guide* or on-screen *User's Guide* for instructions.

Macintosh®

1 Make sure the NX300 Series is **NOT CONNECTED** to your computer.

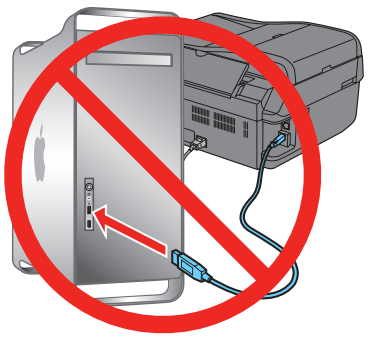

2 Insert the **NX300 Series** software CD.

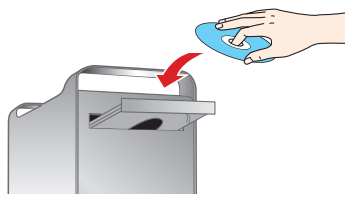

3 Double-click the **Epson** icon.

4 Click **Install** and follow the on-screen instructions.

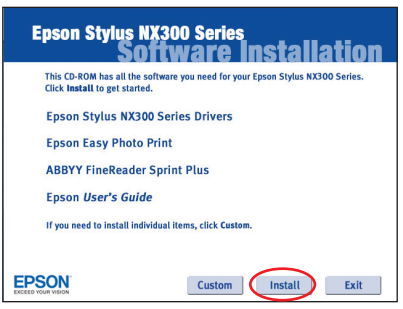
Epson Stylus NX300 Series
Software Installation
This CD-ROM has all the software you need for your Epson Stylus NX300 Series. Click Install to get started.
Epson Stylus NX300 Series Drivers
Epson Easy Photo Print
ABBYY FineReader Sprint Plus
Epson User's Guide
If you need to install individual items, click Custom.
EPSON
Custom
Install
Exit

5 When prompted, connect the USB cable. Use any open USB port on your computer. Make sure the NX300 Series is securely connected and turned on.

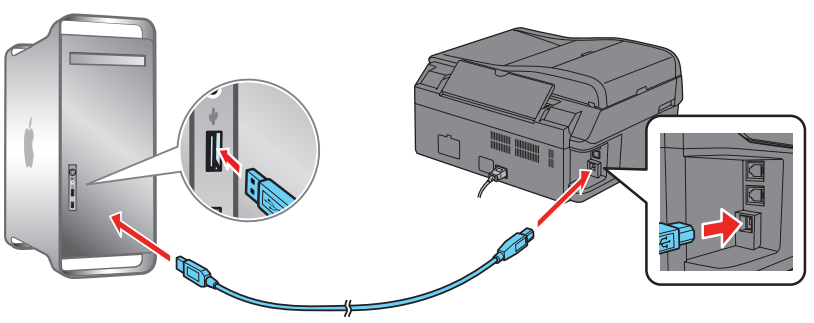

6 Mac OS X 10.5 users: skip to step 10.

Other users: continue with step 7.

7 When you see this screen, click **Open the Printer List**.

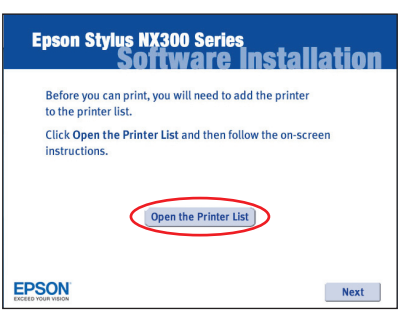
Epson Stylus NX300 Series
Software Installation
Before you can print, you will need to add the printer to the printer list.
Click Open the Printer List and then follow the on-screen instructions.
Open the Printer List
EPSON
Next

8 Follow the steps on the right side of the screen to add the NX300 Series.

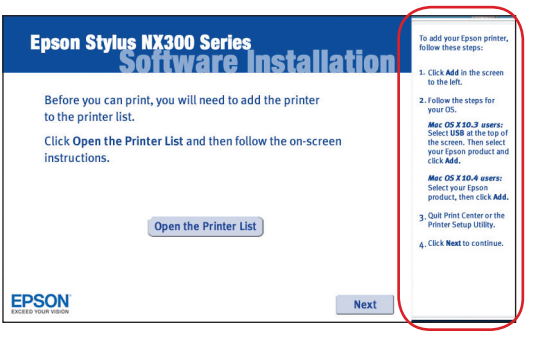
Epson Stylus NX300 Series
Software Installation
Before you can print, you will need to add the printer to the printer list.
Click Open the Printer List and then follow the on-screen instructions.
Open the Printer List
EPSON
EXCEED YOUR VISION
Next
To add your Epson printer, follow these steps:
1. Click Add in the screen to the left.
2. Follow the steps for your OS.
Mac OS X 10.3 users: Select USB at the top of the screen. Then select your Epson product and click Add.
Mac OS X 10.4 users: Select your Epson product, then click Add.
3. Quit Print Center or the Printer Setup Utility.
4. Click Next to continue.

9 Click **Next** again, if necessary.

10 Follow the on-screen instructions to install the rest of the software and register your NX300 Series.

11 When you're done, eject the CD.

You're ready to print, copy, scan, and fax! See your *Quick Guide* or on-screen *Epson Information Center* for instructions.

Any questions?

Quick Guide

Basic instructions for printing, copying, scanning, and faxing.

On-screen *Epson Information Center*

Click the desktop shortcut for easy access to the NX300 Series *User's Guide*, FAQs, online troubleshooting advice, and software downloads. You can also purchase paper and ink.

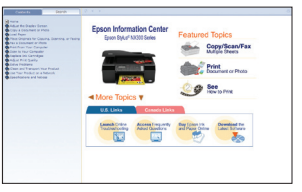

On-screen help with your software

Select **Help** or **?** when you're using your software.

Epson Technical Support

Internet Support

Visit Epson's support website at **epson.com/support** and select your product for solutions to common problems. You can download drivers and documentation, get FAQs and troubleshooting advice, or e-mail Epson with your questions.

Speak to a Support Representative

Call (562) 276-4382 (U.S.) or (905) 709-3839 (Canada), 6 AM to 6 PM, Pacific Time, Monday through Friday. Days and hours of support are subject to change without notice. Toll or long distance charges may apply.

Software Technical Support

ABBYY® FineReader® Sprint Plus
(510) 226-6717
www.abbyyusa.com
support@abbyyusa.com

Need paper and ink?

Want great results? Simple. Use genuine Epson paper and ink. For the right supplies at the right time, you can purchase them at Epson Supplies Central℠ at **www.epson.com/ink3** (U.S. sales) or **www.epson.ca** (Canadian sales). You can also purchase supplies from an Epson authorized reseller. To find the nearest one, call 800-GO-EPSON (800-463-7766).

Presentation Paper Matte

Smooth, non-glare, instant-drying paper for scrapbooks, newsletters, and graphical presentations. See the entire line of Epson photo papers at Epson Supplies Central.

Genuine Epson Inks

Look for the numbers below to find your cartridges.
It's as easy as remembering your number!

DURABrite Ultra INK

69 or 88 Black

69 or 88 Magenta

69 or 88 Cyan

69 or 88 Yellow

68 Try the High Capacity 68 black cartridge available at **www.epson.com/highcapacity** (U.S. sales) or **www.epson.ca** (Canadian sales) or at your local reseller.

Epson and Epson Stylus are registered trademarks, Epson Exceed Your Vision is a registered logomark, and Supplies Central is a service mark of Seiko Epson Corporation. DuraBrite is a registered trademark of Epson America, Inc.

General Notice: Other product names used herein are for identification purposes only and may be trademarks of their respective owners. Epson disclaims any and all rights in those marks.

This information is subject to change without notice.

© 2008 Epson America, Inc. 5/08

CPD-25565

Cut out the card to the right and keep it with you when purchasing replacement ink cartridges.

Epson NX300 Series Ink Cartridges

DURABrite Ultra INK

69 or 88 Black

69 or 88 Magenta

69 or 88 Cyan

69 or 88 Yellow

68 High Capacity Black

Printed in XXXXXX